

BEFORE YOU BEGIN



Tools Needed:

- Phillips screwdriver
- Safety glasses

UNPACKING



Pull lid latches in an outward motion, remove tank cover and any accessories that may have been shipped in the tank.




Inspect:

After unpacking the unit, carefully inspect for any damage that may have occured during transit. Check for loose,
missing or damaged parts. Shipping damage claims must be filed with the carrier.

See Important Safety Instructions on Page 2 and 3, and Cautions and Warnings as shown.


PACKAGE CONTENTS

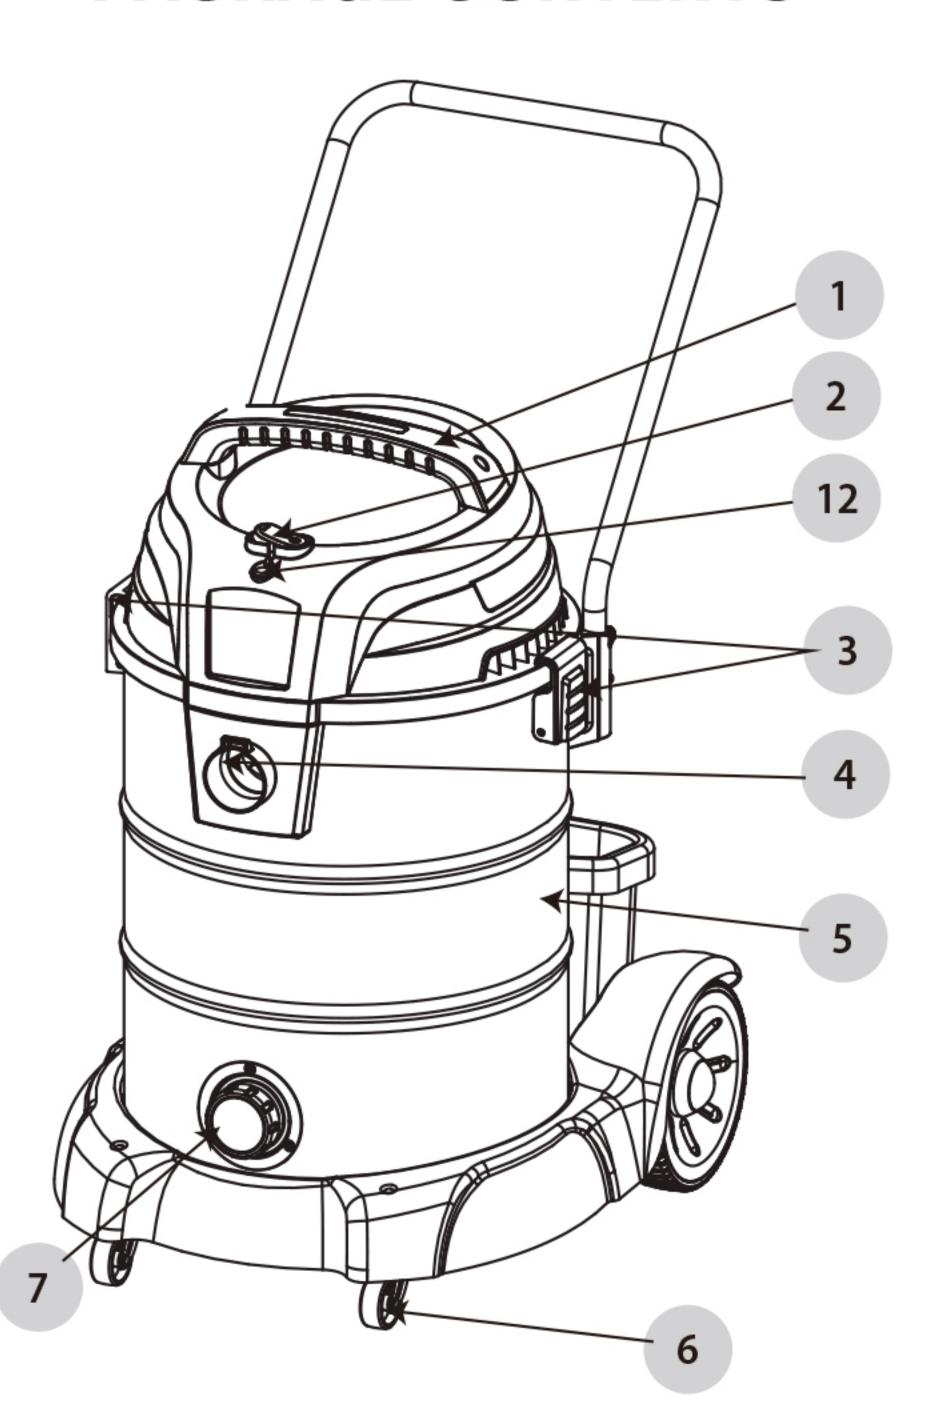

Description

Wheel cap


Part

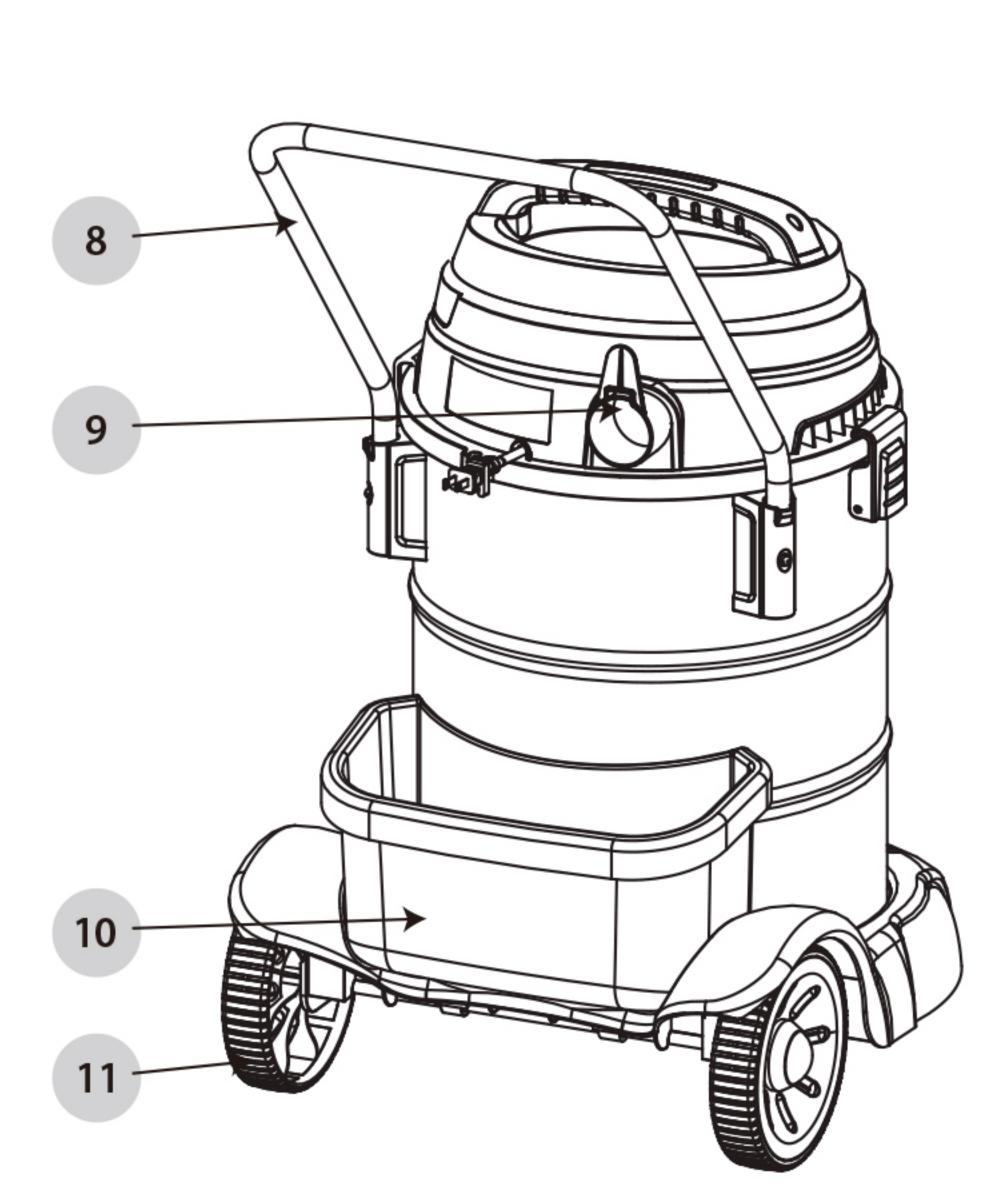

Qty

Part No.

Q00013350011

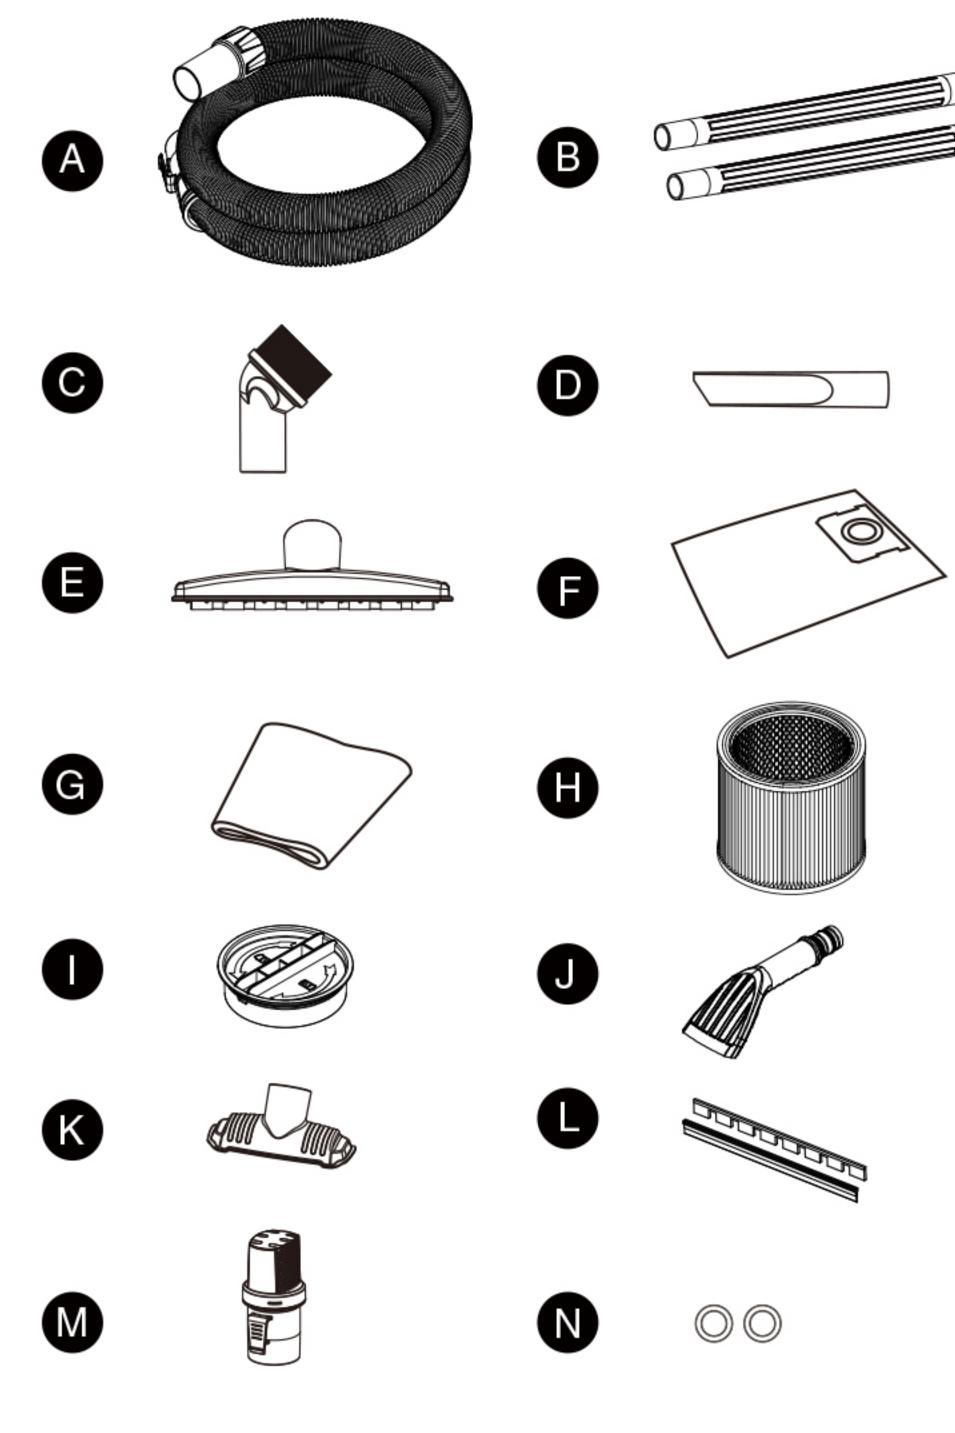

Α	12' x 1½" Hose	19-1104	1
В	Extension wand	19-1200	2
С	Round brush	61HW16	1
D	Crevice nozzle	61HW18	1
E	Floor nozzle	19-1900D	1
F	Disposable dust bag	61HW10	1
G	Foam filter	61HW04	1
Н	Cartridge filter	61HW01	1
1	Retainer cap	783GC1	1
J	Claw nozzle	61HW17	1
K	Utility nozzle	19-1300	1
L	Squeege	19-1901	1
М	Muffler	783GA7	1
N	Gasket	J1580870001	2
0	Split pin	J2840890021	2
Р	Axle	J2853500034	1

Cleaner Description			
ltem	Description		
1	Handle		
2	Power Switch		
3	Lid Latch		
4	Vacuum Port		
5	Dust Tank		
6	Caster		
7	Drain port		
8	Transport handle		
9	Blower port		
10	Tool storage basket		
11	Rear wheel		
12	Dust-full indicator		